

# HYUNDAI ELANTRA

<b>Axeltätningar/Shaft seals</b>	<i>Art.#/part#</i>
<b>94-00 FS10</b>	<b>FS24032-1</b>

<b>Exp.ventiler/Exp.valves</b>	<i>Art.#/part#</i>
<b>96-00</b>	<b>FS38884</b>
<b>01-04</b>	<b>FS39087</b>
<b>05-06</b>	<b>FS39033</b>

<b>Kompressorer/Compressors</b>	<i>Art.#/part#</i>
<b>96-00 FS10</b>	<b>FS58154</b>
<b>01-06 HS15</b>	<b>FS58922-5</b>

<b>Kondensorer/Condensers</b>	<i>Art.#/part#</i>
<b>94-95</b>	<b>RN17526</b>
<b>96-00</b>	<b>RN40096</b>
<b>01-05</b>	<b>RN40237</b>

<b>Kylelement/Evaporators</b>	<i>Art.#/part#</i>
<b>96-00</b>	<b>FS54578</b>

<b>Lager/Clutch bearings</b>	<i>Art.#/part#</i>
<b>94-00 FS10</b>	<b>FS25204</b>

<b>Packningssatser/Gasket kits</b>	<i>Art.#/part#</i>
------------------------------------	--------------------

 
<b>Slangheter/Hose asy.</b>	<i>Art.#/part#</i>
-----------------------------	--------------------

<b>Torkfilter/Driers</b>	<i>Art.#/part#</i>
<b>94-00</b>	<b>FS33910-0</b>
<b>01-06</b>	<b>FS33910-6</b>

<b>Tryckvakter/Press.switches</b>	<i>Art.#/part#</i>
-----------------------------------	--------------------


# HYUNDAI ELANTRA

## Axeltätningar/Shaft seals

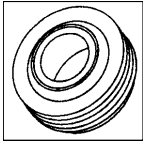

Art# FS24032-1


## Exp.ventiler/Exp.valves

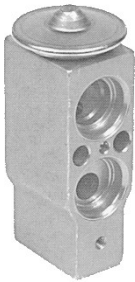 

Art# FS38884  
Org#




 Art# FS39087  
Org# 97604-26001

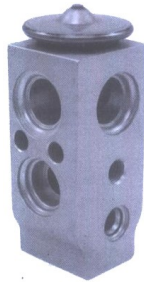

Art# FS39033  
Org# 97626-2D100

## Kompressorer/Compressors

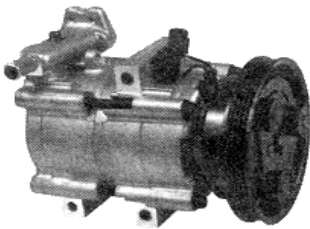 


Art# FS58154  
Org#




Art# FS58922-5  
Org# 97701-2C100


## Kondensorer/Condensers

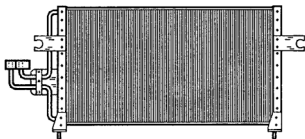 

Art# RN17526  
Org# 97606-284250

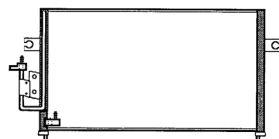 


Art# RN40096  
Org# 97606-29100

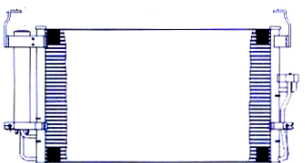 

Art# RN40237  
Org# 97606-2D000

## Kylelement/Evaporators

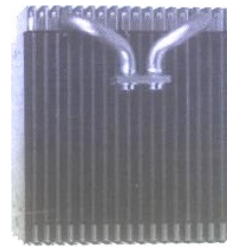 

Art# FS54578  
Org# 97604-29000


## Packningssatser/Gasket kits
 
## Slangheter/Hose asy.

## Torkfilter/Driers



Art# FS33910-0  
Org# 9781-29000

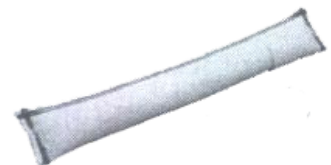

Art# FS33910-6  
Org# 97802-25000

## Tryckvakter/Press.switches